 



Rand McNally Card Update Procedure

- 1) Remove your Rand McNally SD card from the Xite radio.
- 2) Download the Rand Dock Software [here](#). Be sure your machine meets the requirements with either [XQuartz for Mac](#) or [.net Framework for Windows](#) installed and you have a functioning SD Card Reader available.
- 3) Install the software to your computer and fill in the registration information (note: this will not be required if you have already registered with the software).
- 4) Insert the Rand McNally SD card into your SD Card Reader.
- 5) Start the rand Dock Software if it does not start automatically.
- 6) If you receive a warning:



Follow the instructions.

 
- 7) If not. Select the Register for Lifetime Maps option (note: this option will not be available if you have already registered with Rand McNally).

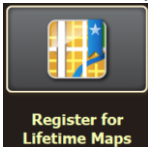


- 8) Once registered select the Update Available Option (note: if your device is up to date this will show "Your Device Is Up To Date")



- 9) Allow the update to initiate and press the Begin Download button:

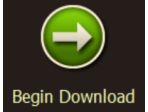

- 10) Once the new updates have downloaded you will be prompted to transfer the data to your SD Card. Click the Transfer button:

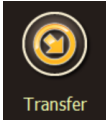

- 11) When complete the Rand Dock should show that there are no updates available.



- 12) Once the transfer has completed remove the SD card and go back to the Xite radio.
- 13) Do not install the SD card and turn the radio on.
- 14) Select the Rand McNally application and insert the card when asked.

This procedure should be followed before each trip to be sure you have the latest updates for construction data etc. on your system.